


# Installation Procedures

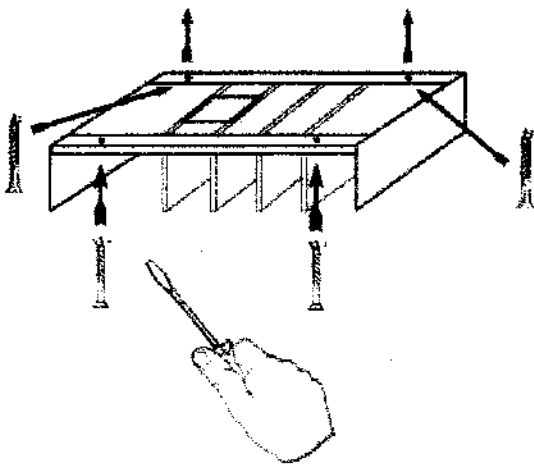

**Handle with care:** The Wrap-A-Way has 3 cutting edges that can cut and scratch. Place masking tape over the edges to protect them, your hands, clothing and fingers during handling and installation.

Select a location for your dispenser and carefully hold it in place. Check for fit or any obstructions that could interfere with the dispensing operation. Make sure you have room to pull your wraps. **All models are shipped to 'tear right', but are easily reversed to 'tear left' by relocating the door and paper towel hook (deluxe models) to the rear frame. Note:** Changing towel Hook: Gently tap out and install in the opposite side. Pre-drilled holes are provided for this change, if needed.

**Most cabinets have a front and rear frame to which the Wrap-A-Way is attached.** Hold the dispenser under the cabinet with one hand and stick an ice pick or awl through the 4 mounting SLOTS to mark the cabinet frame for drilling. Drill 7/64 inch holes about 1 inch deep into the frames to prevent splitting. Using the 4 screws provided, place a screw on the tip of a screwdriver and drive them through the dispenser frame until it is tight. *(See illustration at left.)*

**Cabinets that do not have a rear frame will require a wood spacer the same thickness of the cabinet frame and the full length of the dispenser.** Place it at the rear wall between the cabinet and the dispenser. Screw it in place as in the normal installation.

**Custom cabinets that are deeper than 12 inches require a back plate on the dispenser.** Cut a piece of wood and cover the back of the unit. Install as normal.

**Island cabinets make an ideal location for the Wrap-A-Way.** Another door can be added to the dispenser and it can be used and loaded from front or back. Call our customer service for a duplicate door.

**European cabinets with full overlay doors will require about 1/8 inch shims, front and rear, between the cabinet and the dispenser to provide clearance when opening the dispenser door.** Install as normal.

**Tiles, paneling or other decor that is applied to the wall, may cause the dispenser to protrude beyond the cabinet frame.** If it is not practical to remove the decoration, trim the overlapping frame with a piece of quarter round molding; stain or paint molding to match.

**Lighting underneath modern cabinets may leave little or no room to install the Wrap-A-Way dispenser.** Unfortunately, the only solution may be to remove a portion of the lights.

**Don't give up if your Wrap-A-Way is not a typical installation.** The extra effort to install it will be rewarded by years of enjoyment, convenience, and satisfaction. Call our customer hotline for help.


**WARNING: Never stain, paint, varnish, or alter the interior of the wrap compartments!**

Use only 25-100ft rolls of wrap. Initially, start with quality brand name plastic wraps as many discount wraps are flimsy, poorly wound, may bind, hang up, and are difficult to tear. Remove the wrap from the box and prepare the roll for loading. DISCARD THE BOX. Make sure the roll is wound tight (no sags) and is smooth from edge to edge. If the roll is not tight, have someone hold the roll by the edges of the cardboard tube while you gently pull on the foil or wax until it stops slipping or unwinding. Carefully rewind the roll until you have a 3-4 inch tail. Load the roll into its DESIGNATED COMPARTMENT. See illustrations below. When loaded properly, the tail hangs down next to its cutting edge.

**NOTE:** Each compartment is made slightly different for each material. Placing the correct wrap in its designated compartment will insure maximum performance.

**Boxed Baggies** Open box as usual and place box upside down in its designated compartment. To dispense, simply pull bag out like a tissue

**Paper Towel** Deluxe models have a compartment for paper towels. Simply insert the roll on the hook with the tail hanging left or right, as you prefer. **Note:** It is possible that hook has fallen out during shipment - see paragraph #2 under Installation Procedures.

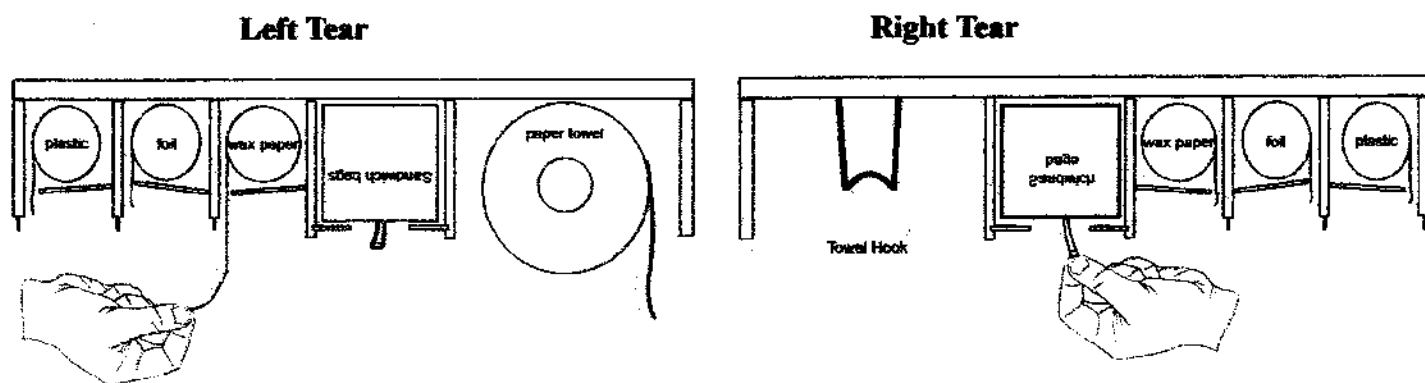

*\*see 2<sup>nd</sup> paragraph for reversing instructions.*

**Dispensing:** Grab the tail end of the wrap and pull straight down until you have the required amount of wrap. (**Hint:** start with a 12"-18" length as shorter pieces are more difficult to tear). Pull and tear the wrap against its cutting edge. Start with the plastic wrap, then foil, and then the wax paper. Keep practicing until you get the feel. Remember, the Wrap-A-Way is a new and wonderful appliance and like all new things requires a little practice and training. Take the time to get the 'feel' of each wrap. Don't be afraid to 'waste' the wraps. You are learning! With practice, you will never waste it again because you will be making perfect cuts, with all the wraps.... all the time.

**Waw is designed to be used with the door closed. You may use the dispenser with the door open. Put a finger on the roll to hold it in place while cutting the wrap until you are familiar with roll placement and the cutting procedure.**

***Happy Wrapping!***

**Wrap-A-Way Dispenser, Inc.** offers a 30 day money back guarantee if you are not completely satisfied with the Wrap-A-Way for any reason. Simply call our Customer Hotline for a return authorization number! It is backed by a 3 year limited warranty. Made in the USA. Patents pending

Wrap-A-Way Dispenser, Inc. PO Box 1651 Manchester, MO. 63011

**Customer Hot Line: 1-866-296-0263**